Premium Boost Gauge
Amber/White Display (270° Scale)

1. Wiring Back of Gauge

2mm Allen wrench elevation adjustment. This can be used to zero out the gauge at high elevation

(Daisy Chain power wire to next gauge plugs in he r e .)

Power
Wire plugs in here

Optional External Warning light Plugs in here.
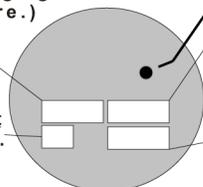
Boost sensor cable

Wiring Instructions

Red- Constant Power (A power source that has power with the car on or off)
Black- Ground
White- Accessory(Acc.) Power (Power when Ignition key is on)
Orange- Headlights (Power when Headlights are on). This will make the gauge change color when the headlights are turned on.

2. Setting warning / Mute Feature

To set the warning feature:
After the opening ceremony is complete, Press and hold the button down for approx 5 seconds until the pointer begins to blink. Release button. Push and hold button to move quickly across the scale or Toggle button to move pointer in small increments. Once you have the pointer were you want it, wait 5 seconds to "set" and pointer will stop blinking

Mute feature:
1.) With ignition key in off position, press and hold button-
Turn Ignition on, wait for pointer to come to a rest then release button.
2.) To turn sound back on-Repeat step *1*

Peak recall
1.) Push button one time to recall peak level. The Blue light will come on when gauge is in recall mode. The pointer will rise to the Highest level attained by the gauge and remain there approximatley 5 seconds.
2.) To reset peak level: While in peak mode (blue light is on) press and hold button down

3. Installing Boost sender

Cut boost line and install supplied plastic "T" fitting. Connect "T" fitting to In-Line Filter with supplied hose. Then connect In-Line Filter to sender with supplied hose.

**In-line filter

**Very important to keep foreign material out of the boost sender.

Supplied "T" Fitting

Boost line

Boost sender

Plug in sender cable from Gauge.
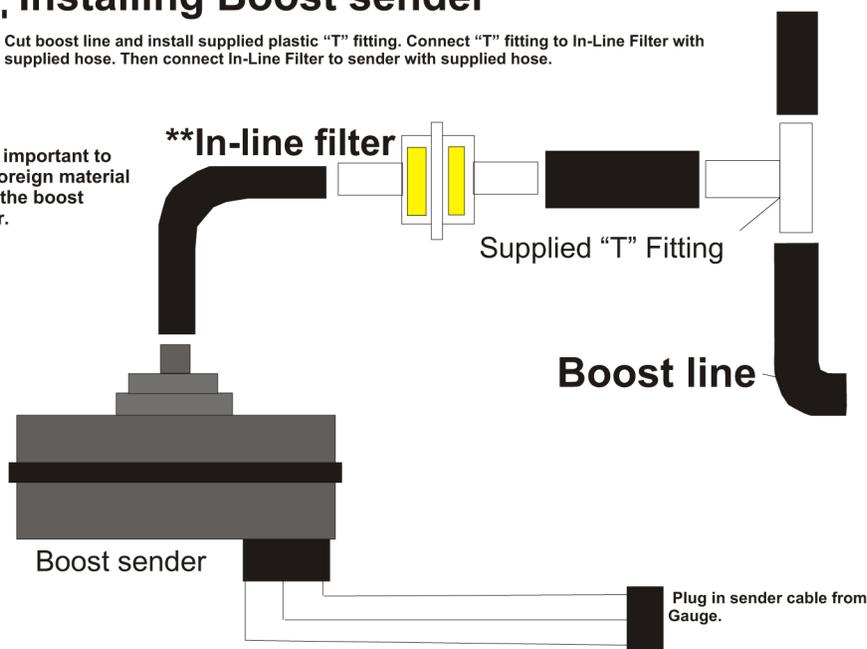
Lighting Diagram

Day Time	Night Time	Installation	
White	White	White	Connect to acc. Power
		Amber	Do not connect
Amber	Amber	White	Do not connect
		Amber	Connect to acc. Power
White	Amber	White	Connect to acc. Power
		Amber	Connect to parking lamp
Amber	White	Amber	Connect to acc. Power
		White	Connect to parking lamp

Double sided tape   VISOR

Gauge

0.1~0.2in   Power wire

Tape   Gauge cup and meter

WWW.RSPEC.CO.UK