


ELECTRICAL GAUGES

SMOKE LENS SERIES BLUE & WHITE LED DISPLAY

Fuel Level Gauge



OPENING CEREMONY

1

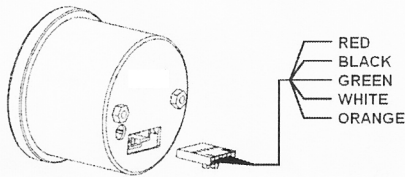


- RED - TO IGNITION SWITCH 12V(+)
- BLACK - BATTERY(-)
- GREEN - FUEL LEVEL SENDER
- WHITE - NOTE
- ORANGE - NOTE

2

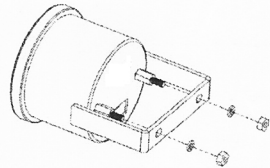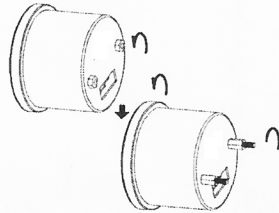

3

Fuel Level Sensor Sensitivity Switch

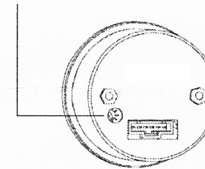


4

Use the Fuel Level Sensor Sensitivity Switch on the back of the gauge to set the correct ohm (Ω) value scale to match the rating of the vehicle's fuel level sensor.

"Empty" Ohm Value	"Full" Ohm Value	Switch #
N/A	N/A	0
73 Ω	10 Ω	1
16 Ω	158 Ω	2
0 Ω	30 Ω	3
0 Ω	90 Ω	4
240 Ω	33 Ω	5
107.5 Ω	7 Ω	6
131 Ω	12 Ω	7
0 Ω	120 Ω	8
10 Ω	180 Ω	9

5

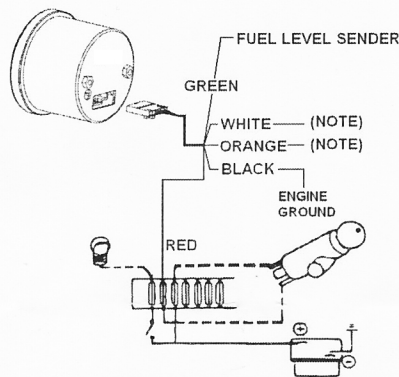

6

NOTE: GAUGE REQUIRE FUNCTION

Function		INSTALLATION
Day	Night	
WHITE	WHITE	WHITE WIRE - 12v Accessory ORANGE WIRE - Do not connect
BLUE	BLUE	WHITE WIRE - Do not connect ORANGE WIRE - 12v Accessory
WHITE	BLUE	WHITE WIRE - 12v Accessory ORANGE WIRE - 12v Headlight Source
BLUE	WHITE	WHITE WIRE - 12v Headlight Source ORANGE WIRE - 12v Accessory

7

Connect To Green Wire From Gauge

